


## Spare parts - **ALLVIS**

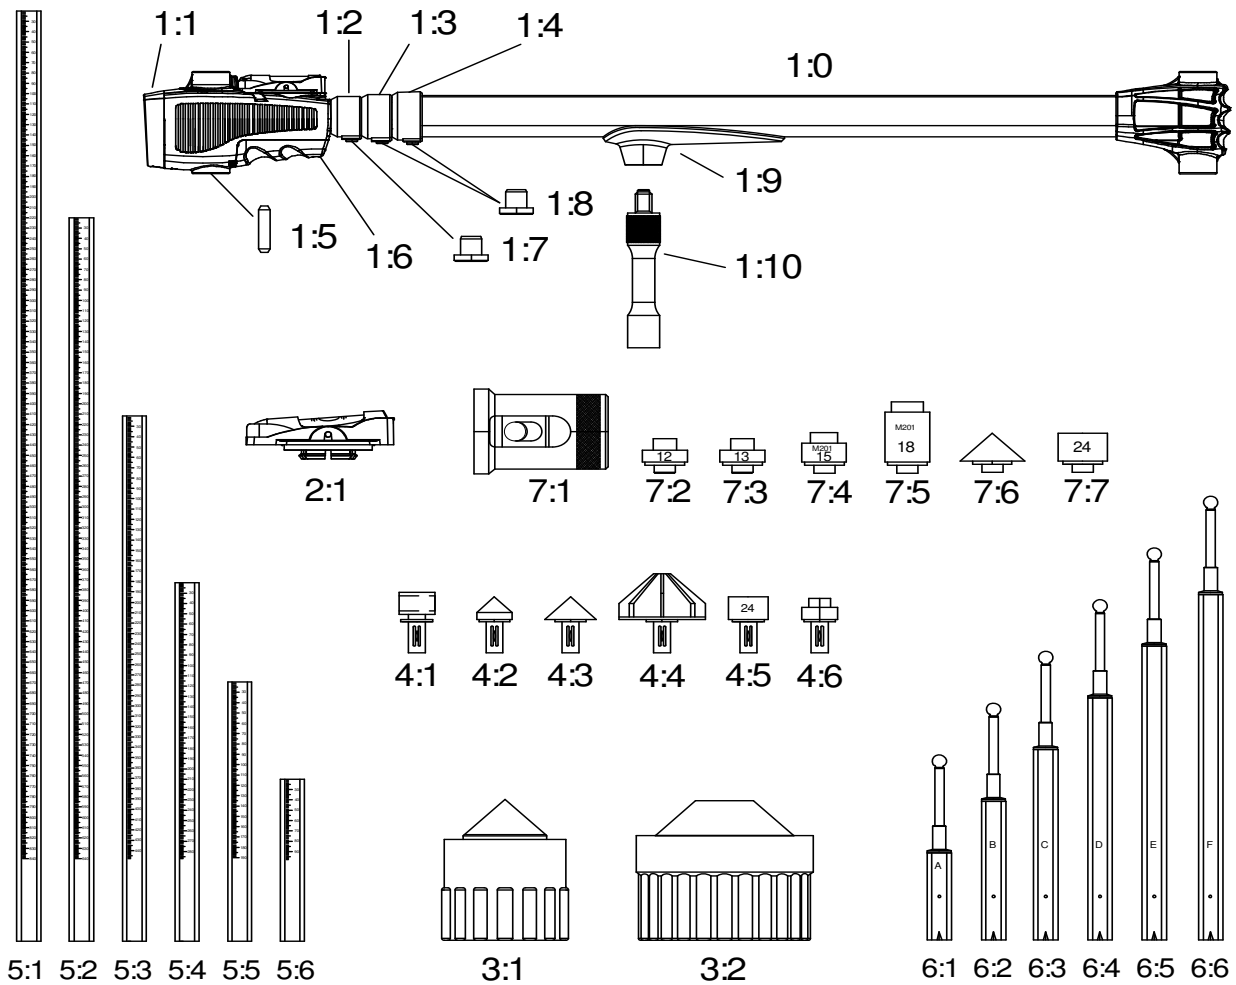

Pos	Art. No.	Name
1:0	AVP1900	Measuring tool
1:1	AVP1375	Front
1:2	AVP1281	Collar 2
1:3	AVP1291	Collar 3
1:4	AVP1301	Collar 4
1:5	AVP1361	Friction stick
1:6	AVP1380	Battery cover
	AVP1450	Battery
1:7	AVP1320	Locking for collar
1:8	AVP1320-2	Locking for collar
1:9	EMK1404	Slide
1:10	EMK1403	Tip holder for slide
2:1	AVP1410	Level
3:1	AVP1480	Chassis attachment Ø35
3:2	AVA222	Chassis attachment Ø60
4:1	TB3100	Tip holder 90°
4:2	TB3000	Measuring tip Ø25
4:3	TB2900	Measuring tip Ø35
4:4	TB2800	Measuring tip Ø60
4:5	TB1370	Socket ø8-28 (state no when order)
4:6	TB2705	Adaptor M201 6-18 (state no when order)

Pos	Art. No	Name
5:1	AVP1180	Measuring rod 100
5:2	AVP1190	Measuring rod 185
5:3	AVP1200	Measuring rod 285
5:4	AVP1210	Measuring rod 450
5:5	AVP1220	Measuring rod 645
5:6	AVP1230	Measuring rod 845
6:1	AVP1110	Datum rod A
6:2	AVP1120	Datum rod B
6:3	AVP1130	Datum rod C
6:4	AVP1140	Datum rod D
6:5	AVP1150	Datum rod E
6:6	AVP1160	Datum rod F
7:1	AVP1470	Chassis attachment 90°
7:2	AVP1485	Adaptor 12
7:3	AVP1490	Adaptor 13
7:4	AVP1500	Adaptor 15
7:5	AVP1510	Adaptor 18
7:6	AVP1521	Measuring tip short Ø35
7:7	AVP1540	Socket short 10-26 (state no when order)
	AL9000	Allvis storage case
	AVA111	Complete truck adaptor kit